

— PLEASE READ FIRST —


For instructions on setting up voicemail and other advanced features, please visit the Phone Features Questions section which can be found from the Customer Service/FAQ link on the website.

VoIP Basic Installation Instructions



Step #2 - Connect the WAN port.

1. **Turn off all Power.**
 - Unplug the power cord for your broadband modem.
 - Make sure that you have turned your computer off.
 - And **DO NOT** plug in the Phone Adaptor until instructed to do so.

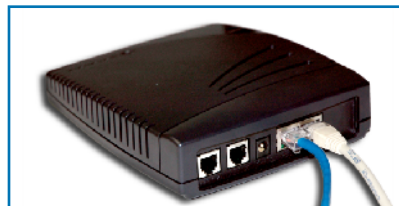

Step #3 - Connect the ENET port.

2. **Connect the WAN port.**
 - Disconnect the Ethernet cable from the back of your computer or router and then connect it into the WAN port on the Motorola ATA Phone Adaptor.



Step #4 - Connect your telephone.

3. **Connect the ENET port.**
 - Connect one end of the Ethernet cable we provide into the PC port on the Motorola ATA Phone Adaptor.
 - Connect the other end of this Ethernet cable into the Ethernet port on your computer or router.

4. **Connect your telephone.**
 - Connect a telephone to the LINE 1 port of the Motorola ATA Phone Adaptor using a standard phone line.



Step #6 - Power on your ATA Phone Adapter

5. **Power on your broadband modem.**
 - Connect the power to your broadband modem.
 - Wait approximately two minutes for it to start up.
6. **Power on your ATA Phone Adapter**
 - Plug the power cord into the POWER port on your Motorola ATA Phone Adaptor, and then into an electrical outlet. This will turn your ATA Phone Adaptor on. Keep this plugged in at all times for proper phone service.
7. **VERY IMPORTANT STEP**
 - Check that the POWER light on the Phone Adaptor is lit.
 - Wait at least five minutes while your Motorola ATA Phone Adaptor starts up.
 - There may be updates that need to be downloaded, such as new firmware or changes to your features. These will be downloaded automatically.
 - **DO NOT** interrupt this process by unplugging the power or lifting the receiver on your phone during the startup process.
 - Interruption of the startup may result in interruption of service.

8. **Power up the computer.**
 - Your Internet connection should work as it did before you installed the ATA Phone Adaptor.

10. **Check your Phone**
 - Pick up your telephone receiver and listen for a dial tone. If you hear a dial tone, you have finished the installation and can begin making calls.